

LED work lamp - Installation Instruction

LED work lamp used to illuminate the working area in vehicles off the public roads.

For proper installation and use of lights it is advisable to read the instructions to ensure personal safety and durability of the products. The device must be installed out of reach of children. The appliance must be fitted out of reach of children.

If you would like to change the existing incandescent / halogen lighting on LED lighting - installation does not require to make any changes, except replacing the lamps.

While installing new / additional LED lighting you must verify the current capacity of the switch to which you are going to connect the lamp. If you exceed the current carrying capacity of the switch to which you want to connect LED lighting, use an additional relay - the installation of lamps should make a professional recording engineer.

Product specification:

Lamps have approvals of electromagnetic compatibility (EMC) confirmed by E-mark R10

Light: Flood / Spot / Combo

Light color: cold

Material: aluminium housing (acts as a heat sink)

Operating Temperature: -40°C to +80°C

Ground: - black cable

Plus: - red cable

Package Contains:

1 pc work light / panel

Set including screws and mounting brackets

The plug and socket installation (depending on package).

Warning! Do not look directly onto the light - it may cause damage or even loss of vision. Install only in specialized workshops or professional services. Use in open space only. Use in accordance to the purpose.

